

IMPORTANT SAFEGUARDS

Signal word Definitions


DANGER-Indicates an imminently hazardous situation; which if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

WARNING-indicates a potentially hazardous situation; which if not avoided, could result in death or serious injury.

CAUTION-Indicates a potentially hazardous situation; which if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.



READ ALL INSTRUCTIONS BEFORE USE.

 **WARNING**--To reduce the risk of fire, electric shock, or serious personal injury:

- Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling or cleaning it.
- Keep the product out of the reach of children and pets. This product is not intended for use by children.
- Do not leave the product unattended while it is in use, especially when children are present. Always unplug the product from the electrical outlet when it is not in use.
- Do not place product Base in or expose it to water or other liquids.
- Keep the Power Cord and product away from heated surfaces.
- Do not use attachments not recommended or sold by the product manufacturer.
- Handle the Blades with care as they are extremely sharp. Use caution when attaching or detaching the Blades.

• Do not touch moving parts (e.g., the Blades) while the product is in use. Keep hands and utensils away from the moving Blades while operating the product.

• Do not plug/unplug the product into/from the electrical outlet with a wet hand.

• To disconnect the product from an electrical outlet, pull directly on the plug; do not pull on the power cord.


• Always operate the product with the cover in place.

• Never place the Blade Assembly on the Base unless attached to the Jar.

• Do not put stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.

• Keep hands and utensils out of container while blending. A scraper may be used but only when the blender is not running.

• Do not operate the product if it has a damaged or cut Power Cord or plug, if wires are exposed, if it malfunctions, or if it is dropped or damaged. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing. See Warranty Repair Instructions.

 **CAUTION**--To reduce the risk of personal injury or product/property damage:

- This product is intended for indoor, non-commercial, non-industrial use in processing foods for human consumption. Do not use the product outdoors or for any other purpose.
- Always operate the product on a flat, stable surface.
- The blender is not intended for blending hot liquid.
- Do not attempt to open any part of the Motor Housing.
- Do not allow the Power Cord to hang, such as over the edge of a table or counter, where it may be tripped over or pulled.

SPECIAL INSTRUCTIONS:

- To avoid a circuit overload when using this product, do not operate high wattage product on the same electrical circuit.
- Avoid the use of an extension cord because the extension cord may overheat increasing the risk of fire.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

PARTS DIAGRAM(1-8):

- 1.Cap
- 2.Lid
- 3.Jar
- 4.Gasket
- 5.Blade Assembly
- 6.Blade Base
- 7.Motor Housing
- 8.Power cord



NOTE: Parts 3-6 are initially assembled in the packaging.

To Assemble

1. Before using the product for the first time, wash all the parts except the Motor Housing in warm, soapy water and then rinse and dry thoroughly.
2. Place the Motor Housing on a flat, stable surface, and then place the assembled Pitcher in the top of the Motor Housing and turn counterclockwise until it is firmly in place.
3. Place the Lid with Cap onto the Pitcher.

To Use

CAUTION: Do not operate the product until it is properly assembled.

1. Ensure the product is unplugged from the electrical outlet.
2. Pour the product is unplugged from the electrical outlet.
3. Wash all solid ingredients and cut them into pieces small enough to fit into the Cap.

CAUTION: The Pitcher has a six cup (48 oz /1.5 liter) capacity. Do not over-fill it.

CAUTION: Do not use the product for mashing or grinding heavy foods (e.g. , dough).

4. After filling the Pitcher with ingredients, Place the Lid with Cap securely onto the Pitcher.
5. Plug the product into a standard 120 volt AC electrical outlet.
6. Turn the Dial to the desired speed (1-5) or hold the Dial in the "P" position for Pulse.

CAUTION: Never operate the product empty.

CAUTION: Never operate the product's motor for more than three minutes at a time. Allow the motor to cool for 60 seconds after three minutes of operation.

NOTE: If the Blades are not operating smoothly, stop the product and add some liquid, or reduce the contents in the pitcher.

7. Turn off the product by turning the Dial to the "0" position and then unplug the product from the electrical outlet.

WARNING: Always unplug the product when it is not in use or will be left unattended.

8. When the Blades have stopped, the Pitcher can be removed from the Motor Housing.

Care and Maintenance

WARNING: Always ensure the product is unplugged from the electrical outlet before relocating, assembling, disassembling, or cleaning it.

CAUTION: Before disassembling the product for cleaning, ensure the Blades have completely stopped and use caution when attaching or detaching them, as they are extremely sharp.

- Always clean the product immediately after each use. Wash all parts except the Motor Housing in warm, soapy water and then rinse and dry thoroughly. Never immerse the Motor Housing in water or other liquids or use abrasive cleaners. Do not place any parts into a dishwasher or extremely hot water.

- To disassemble the pitcher for cleaning, turn the Blade Base counterclockwise and remove it, the Blades, and Gasket from the pitcher. Use a small brush (not included) to remove particles of food lodged underneath the blades.

- Store the product in a cool, dry place.

Electrical Ratings:	120V	60Hz	450W
---------------------	------	------	------