

TAYAMA TM 

ELECTRIC COOKING PLATE

MODEL: TEP-1

120V~60Hz, 1000W

HOUSEHOLD USE ONLY

INSTRUCTION MANUAL

Please read carefully and keep the instruction well



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before operating.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug, base of the unit, or the complete appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer is not suggested. This could cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Be certain control knob is turned to lowest setting before insertion or removing plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
14. Place a heat resistant pad or mat under the unit before using to prevent possible heat damage to counter or tabletop.
15. Any appliance when plugged into an electrical outlet should not be left unattended.
16. Do not clean with metal scouring pads. Please can break off the pad and touch electrical parts, creation a risk of electrical shock.
17. Any maintenance other than cleaning should be performed only by an authorized service repair station.
18. The temperature of accessible surfaces may be high when the appliance is operating.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Tip about the Electrical Cord...

- A. A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and (2) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

D. Warning: Damaged supply cords to be replaced by the manufacturer, service agent or similarly qualified person to avoid hazard.

Operation Instructions For Your Hot Plate

1. Place your stove on a solid, safe surface. Do not set it on a glass surface or a finely finished wood surface.
2. Place a heat resistant pad or mat under the unit before using to prevent possible heat damage to counter or tabletop.
3. Plug the cord into the electrical wall outlet and turn the thermostat to the desired heat setting (low, medium or high).
4. Turn thermostat to lowest setting when finished. Then unplug the cord from electrical outlet.

Cleaning Instructions

1. Unplug the cord.
2. Wipe surface with damp cloth or sponge. Do not use steel wool or abrasives.
3. **Warning:** No maintenance other than cleaning is required on this appliance.