

TAYAMA[®] LIMITED WARRANTY

TAYAMA APPLIANCE USA INC. warrants their appliances free from electrical defects for one year from provable date of purchase in the Continental United States within this warranty period.

TAYAMA APPLIANCE USA INC. will repair or replace defective parts.

At no charge, provided the product is returned freight prepaid with proof of purchase and U.S. \$12.00 for shipping and handling payable to TAYAMA APPLIANCE USA INC. Please allow 1-2 weeks for return shipping.

This limited warranty covers appliances purchased and used within The surrounding United States and does NOT cover:

- Damages caused from improper usage or installation of appliance.
- Damages caused from shipping.
- Defects other than manufacturing defects.
- Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect voltage.
- The loss or missing parts of the appliance. Parts will need to be purchased separately.
- Damage from service by other than an authorized dealer or service center.
- Any transportation and shipping charges.

This warranty gives you specific legal rights that may vary from state To state and does not cover areas outside the continental United States.

TAYAMA APPLIANCE USA INC.

Website: www.tayama-usa.com

Email: info@tayama-usa.com

TAYAMA[®]

INSTRUCTION MANUAL

ELECTRIC GRILL

MODEL NO : TG-100



120V~60Hz 1440W

Affordable, Easy to Use, Quality Appliances

HOUSEHOLD USE ONLY

TAYAMA APPLIANCE USA INC.

READ AND SAVE THESE INSTRUCTIONS

Dear customer,

Before using your barbecue grill, read the following instructions carefully. Make sure that the supply voltage is the same as the voltage marked on the barbecue grill.

WARNING !

- Never cover the grill rack with aluminum foil, or any kind of kitchenware, etc.
 - Always fill the tray with a thin layer of water before you switch on the appliance. The water will allow for easy cleaning of the tray.
 - The housing and the heating element gets very hot when in use. Be careful not to touch them while the appliance is in use or until fully cool (CAUTION: Do Not Touch Hot Surface!)
 - When using the barbecue grill with stand, always place on a stable, level and safe surface counter top. When using the appliance as a table grill, be careful not to position it right against the wall or into a corner.
 - It is important that the barbecue grill is always supervised while it is in use.
 - Do not store the barbecue grill outdoors to avoid damage from bad weather.
 - Make sure that no inflammable materials are adjacent to the grill.
 - Set up the barbecue grill in a suitable heat resistant work surface.
 - To carry the appliance only touch the plastic handles. Always carry the grill and the stand separately.
 - Always empty the appliance and allow it to cool before you store it.
 - Always switch off and disconnect the barbecue grill from the main supply socket:
 - When it is not in use.
 - In the event that it malfunctions during use.
 - Before cleaning.
 - This barbecue grill is not intended for use with charcoal.
 - All repairs of electrical appliances should only be performed by an Authorized Repair Technician.
 - Should the barbecue grill fail to operate, please contact the nearest Authorized Service Center. Special tools are needed for its repair. Never attempt to repair the barbecue grill yourself.
- In case the barbecue grill is operated in any manner other than described in

these instructions for use, no liability will be undertaken for possible damage.

- The temperature of accessible surfaces may be high when the appliance is operating.
- The surfaces are liable to get hot during use.
- The appliance shall be away from the wall or other combustible material during use.
- Warning: Charcoal or similar combustible fuels must not be used with this appliance.
- Indoor use only.
- If the supply cord is damaged, contact an Authorized Service Center to avoid a hazard.

Before Using:

Clean the barbecue grill and its accessories. When it is first switched on, the grill may emit a new smell. A small amount of smoke may also be noticeable. We therefore recommend you to heat up the barbecue grill for about 5 minutes without any food on the grill.

How to Use Your Barbecue Grill:

Connect the barbecue grill to the main supply socket and turn the thermostat knob to the highest setting (“Max”), the pilot light will come on. Preheat for about 5 minutes before use. When grilling delicate foods or for keeping warm you can turn the thermostat back to a lower position and/or adjust the grill rack to the middle or upper position.

Cleaning and Maintenance:

Before cleaning your barbecue grill, always make sure that the plug has been removed from the mains supply socket. Allow the grill to cool down thoroughly before cleaning. Never switch the heating element on when it is not placed onto the appliance. Clean the heating element with a clean and dry cloth only. Clean the grill rack and the tray with warm soapy water and dry afterwards. Do not use harsh abrasive cleaners or a metal sponge to clean the tray.

SERVICE & IMPORANT NOTICE

If the supply cord is damaged, contact an Authorized Service Center to avoid a hazard.