

TAYAMA®


ELECTRIC GRILL

Model TG-876



Please read all instruction carefully and keep it for future reference.

COMPONENTS:

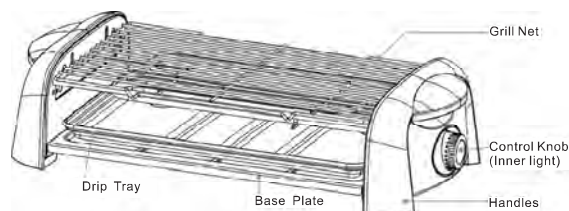

- Grill Net
- Adjustable Temperature Control Knob with inner pilot light
- Plastic Handles
- Drip Tray
- Base Plate

In the box

- Grill unit: 1 piece
- Instruction manual: 1piece

Getting start

- Read all instructions carefully.
- Remove any packaging from the product.
- Place the package inside the box and either store or dispose of responsibly.

Assembly

1. Check that the voltage of your appliance against your mains (220-240V.a.c.).
2. Place the unit on a flat and stable surface. We recommend using a surface which is heat insulating and fire resistant when using the Electric Grill.
3. Place the Grill Net on top of the Cool Touch Base. Be sure that it is properly fixed.
4. Place the Oil Drip Tray on the Base Plate.

Specifications

RATED VOLTAGE	120V
RATED FREQUENCY	60 Hz
RATED POWER	1120 W

2

HOW TO USE:

Before each use, unwind the powercord completely. Remove any object that may have been on top of the unit. Do not place unit near the wall, leave a gap of minimum 4" away from it.

1. Plug the unit and switch on at the mains
2. Pull out the Oil Drip Tray and fill with water to half tray to reduce smoke while cooking. Slide the Oil Drip Tray carefully back into position.
Important: Do not pour water over the heating element.
3. Adjust the Variable Temperature Control to the needed cooking temperature, from MIN to MAX.
NOTE: For initial use, smoke and odor may be observed when the unit is turned ON, this is normal.
4. Pre-heating: position it on MAX for 10-15 minutes. Then turn it to the position of your choice.
5. Put the food items such as meat, fish or vegetables over the Grill Net for grilling.
6. Remove the food once the grilling process is completed.
7. Turn OFF after use and unplug the unit.

CAUTIONS:

1. **Ensure the drip tray is always filled with water to avoid overheating of the appliance and make clean-up easier.**
2. **All parts of the unit will be very hot, especially Grill Net and Drip Tray when in use. USE CAUTION TO AVOID INJURIES.**
3. **Do not use this grill on unstable surfaces on top of flammable materials (ie.newspaper, cloth, carpets, etc.).**
4. **Advisable to place grill on top of heat proof material.**

REMEMINDER:

1. The pilot light indicates that the appliance is heating up.
2. When the item is working, it will stop heating and pilot light will be off when the heater temperature reaches to the set temperature. And it restarts again after 1-2 minutes.

3

SAFETY WARNINGS:

The following basic precautions should always be adhered to when using electric appliances:

1. The appliance should be switched off at mains when not in use.
2. The appliance must be unplugged from the power supply after use or before it is cleaned or whilst it is being repaired.
3. **CAUTION: Never leave the unit unattended while cooking.**
4. Do not use the appliance for any purpose other than that for which it is designed.
5. **This appliance is intended for domestic use only.** It should not be used for commercial purposes.
6. **This appliance is not intended for use by persons (including children) who are not mentally able, physically capable, experienced or do not understand the product. They should be given supervision and instruction in the use of the appliance by a person responsible for their safety.**
7. Close supervision is necessary when any appliance is used by or near children.
8. Ensure that the power cord is not hung over sharp edges and keep it away from hot objects and open flames that could cause damage.
9. Do not use any appliance with a damaged cord or plug. If the cord is damaged it should be replaced with the same type and size or bring the unit to the nearest authorized service center.
10. Do not use two-way socket with other appliance.
11. Do not place on or near gas stove, electric stove or in a heated oven.
12. Keep curtains, furniture, flammable materials, etc. away from the unit and from the convenience outlet where the unit is plugged.
13. **Do not touch hot surfaces (metal grill net), use cool touch handles or knob.**
14. Do not use accessories not recommended or sold with this unit.
15. To protect against electric shock, **NEVER** immerse the appliance with heating element or cord into water.
16. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
17. Charcoal or similar combustible materials must **NOT** be used with this appliance.
18. Ensure there is sufficient ventilation around the appliance to allow the escape of heat and steam.
19. This appliance contains no user serviceable parts. All repairs should only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.
20. Do not operate the appliance after a malfunction or if it has been dropped or damaged in any way.
21. Do not move the Electric Grill while it is in use or while it contains hot oil or fat. Doing so could cause serious harm to the user and/or third party.

4

- 22. Do not place anything between the grill net and the food (e.g. dish, aluminum foil, etc.)
- 23. Before switching off at the mains turn the thermostat to the stop position (0) or switch to off.
- 24. Never leave outdoors and always store.
- 25. Failure to follow all instructions listed may result in electric shock, fire or serious personal injury. The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur while the product is in use. It must be understood by the Operator that common sense must be adopted when operating the appliance.

CLEANING AND MAINTENANCE:

- Turn OFF the Temperature Control and unplug the unit from the mains power supply and let it cool down thoroughly before cleaning.
- Be sure that the unit is cool enough before putting ON or taking OFF parts.
- The Grill Net and Oil Drip Tray are washable with soap and water.
Attention: They only should be cleaned with a sponge added washing-up liquid or dishwasher liquid. **(NO scouring powder and brush!).** Do not use metal scouring ball/pad to clean the unit.
- Do not immerse the Cool Touch Base with Heating Element in water or any other liquids. Wipe the unit base with a damp cloth and dry thoroughly.
- Reassemble the Electric Grill and BBQ after drying and then store.

If foods have burnt on the grill net, leave it to soak for a few hours, and then clean it as described above.

TROUBLE SHOOTING:

Symptoms	Possible Cause	Solution
Grill not heating.	Plug fuse failed.	Replace with another of the same type and rating.
	Thermostat set low or off.	Increase thermostat setting.
Odors or smoke coming from under the grill surface.	Insufficient water in drip tray.	Add water, taking care as the drip tray will be hot.

Save this instruction for future reference. Thank you!

Tayama Appliance USA Inc.
www.tayama-usa.com