

TAYAMA®

Shabu & Grill Multi-Cooker



Tayama Appliance USA Inc.
www.tayama-usa.com
Email: info@tayama-usa.com

Instruction Manual
Model TRMC-40

Cleaning & Maintenance:

1. Disconnect the plug from the power supply when cleaning the product.
2. To clean the outside surface of the base, heating plate, and inner pot use a soft wet cloth. Never immerse the product in water. Not dishwasher safe.
3. Do not use detergent, thinner, stainless brush or nylon brush for cleaning.
4. The inner pot and grill plate can be immersed in water. Be careful to not scratch the non-stick coating.

Trouble shooting:

Question	Possible Reason	Suggested Solution
Not working / No power	No power supply	Check the power supply
	Power cord, plug or socket are damaged or not securely connected.	Confirm the plug and socket are securely connected.
	Abnormal voltage	Check for correct power supply voltage
		Check if the plug/ socket has overheated.
	Check if the socket has overloaded or has been damaged	

Please contact our customer service center for further assistance.

Caution:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.




This product contains recyclable materials. Do not dispose of this product as unsorted municipal waste. Please contact your local municipality for the nearest collection point.

Precautions:

1. Keep the product out of reach of children.
2. Close supervision is necessary when the multi-cooker is used by or near children.
3. Use only on a level, dry and heat-resistant surface.
4. To prevent damage or deformation, do not use the appliance near a stove top or burner.
5. Do not operate any appliance with a damaged cord or after appliance mal-functions or has been damaged in any manner. Contact Tayama Customer Service.
6. To reduce the risk of electrical shock, to disconnect turn any control to OFF, then remove the plug from the wall outlet.
7. Never immerse the appliance in water, it may cause short circuit and electric shock.
8. Use only with a 120v AC power outlet.
9. Ensure that the heating plate is dry, and clean it with a soft cloth.
10. Always unplug from the base of the wall outlet. Never pull on the cord.
11. Please store the appliance in a cool and dry place.
12. This product is intended for Household Use Only. It should not be used in commercial or industrial environment.
13. The appliance should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances the appliance may not operate properly.
14. Please do not unplug the machine while it is in operation. Turn control knob to OFF and then unplug from wall outlet.

COMPONENTS

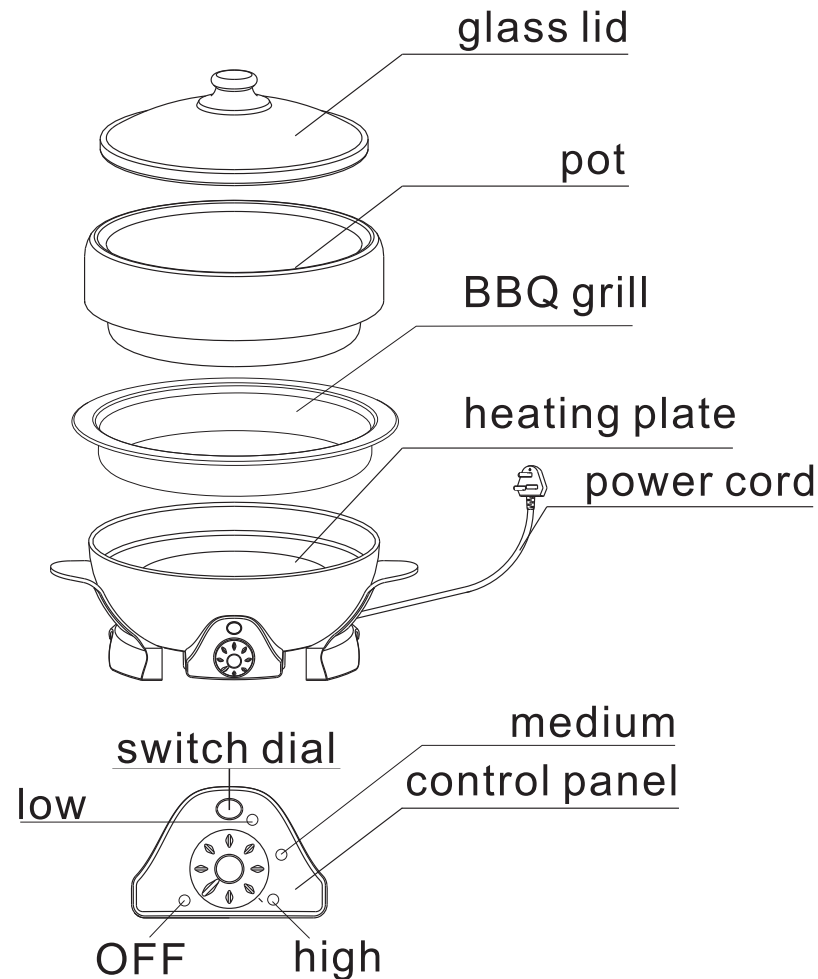

TECHNICAL PARAMETERS

Code	Power	Voltage	Frequency	Capacity
TRMC-40	1000W*	120V~	60Hz	4 Qt.

* The above information is for reference only. Stated and measured values may have $\pm 5 - 10\%$ allowed difference.

How to use:

1. Place the appliance on a level dry and heat-resistant surface.
2. Place the cooking pot or grill plate onto the heating plate and ensure that it is well inserted. DO NOT use both at the same time.
3. Ensure that the heat control is in the "O" position and connect the plug to the power supply. Only switch on the unit when either the cooking pot or grill plate is placed on the heating plate.
4. Adjust the temperature control to the desired temperature and place the food in the inner pot or grill plate.
5. Once the food is cooked, turn to: "O" position. Do not remove the cooking pot or grill plate because it is hot. Remove the food with a non-metallic spatula or similar utensil.
6. After cooking please disconnect the plug from the power supply to allow the cooking pot and grill plate to cool down.

Notice:

1. To avoid damage, please do not scratch the cooking pot and fry pan with a sharp object.
2. For safety reasons, please do not use a pot other than the specialized one included in the package.
3. Please do not use the accessories on an open fire.
4. Please do not cook directly on the heating element.
5. Do not touch heating plate/element after use. Allow appliance to cool before removing and cleaning parts.
6. If deformation of the pot or pan is found, please stop using it immediately and buy a replacement at the authorized service center.